


Installation Instructions

Category 6A UTP Right-Angled Keystone Jack

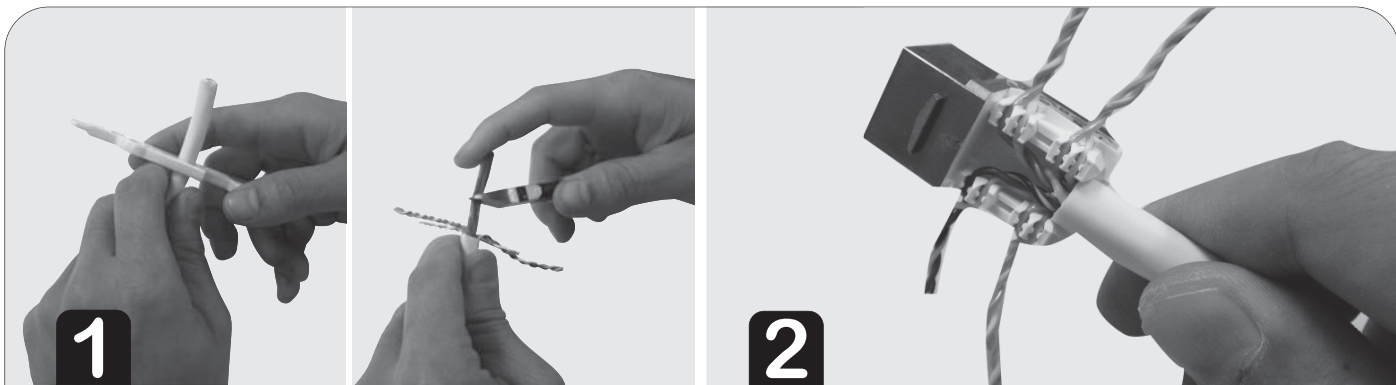


1

Strip the cable jacket about 30mm. Spread each pair and cut off the filler.

2

Pre-load each pair to the designated IDC slot.

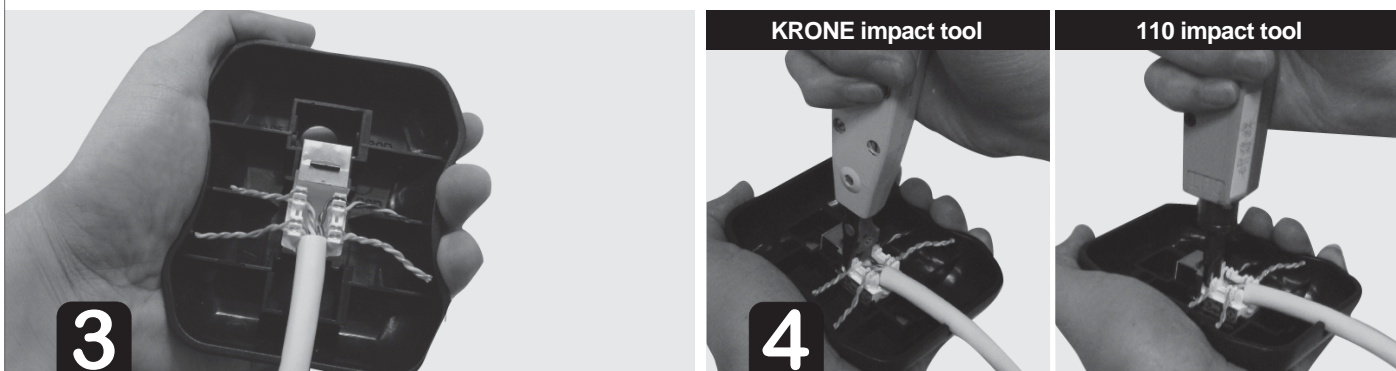


3

Position the keystone jack in an appropriate palm plate (optional).

4

Punch down with a proper impact tool.

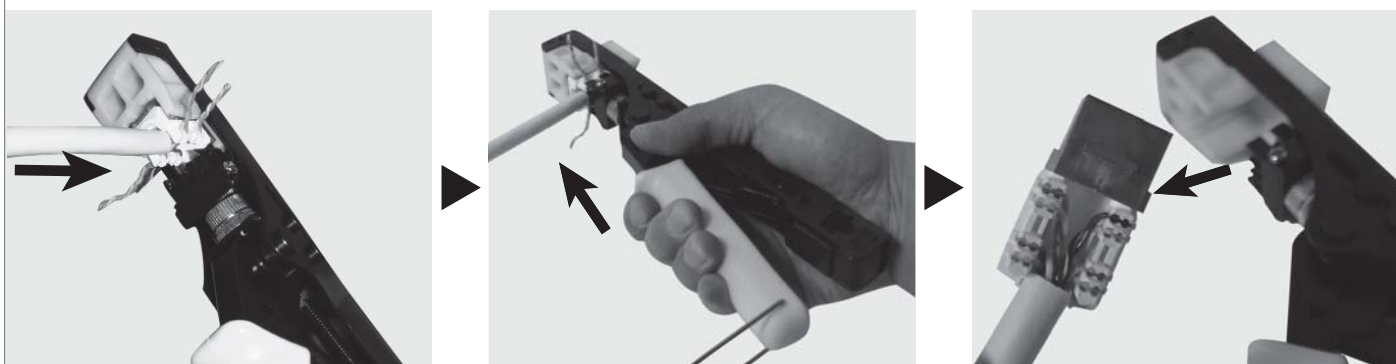

HIGHLY RECOMMENDED : Optional *EZ-TERM* tool for termination.



5

Hood the cap to secure continuity.

NOTE :

1. DO NOT install wiring in a wet location or during a lightning storm.
2. When terminating cables onto the keystone jack, set your impact tool to low impact. Failure to do so will cause damage to the 110 Clip.
3. Do not insert RJ-11 6P plug. RJ-45 and RJ-11 connection are not compatible nor interoperable.